# **INSTALLATION GUIDE**

Chevy Silverado (2016+)







# **CONTENTS**

#### **Disclaimer**

Expedition One is not responsible for any damages to vehicle. We always recommend professional assistance when installing our vehicle products.







#### **Included Hardware:**

(6) 1/2" Bolts (6) 1/2" Nylon Locking Nuts (12) 1/2" Washers (2) 3/8" Bolts (2) 3/8" Locking Nuts (4) 3/8" Washers License Plate Light Kit

#### Tools:

3/4" wrench and socket

#### **Skill Level:**

2/5 stars (Professional install recommended)





#### License Plate Removal

Remove license plate from rear bumper



# <u>Trailer Component Receiver Removal</u>

Unplug wiring from rear and pull out of bumper



#### **Bolt Removal**

Unscrew the two bolts behind receiver component as shown in the picture








Remove License Plate Stock Lights

Remove the stock light wiring as shown



### Stock Bumper Removal

Remove stock bolts underneath each corner of stock bumper

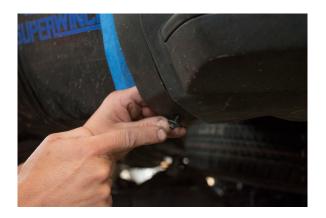

#### Plastic Tread Plate Removal

Pry and pull away the plastic tread from rear bumper as shown and remove bolts from underneath







<u>Underside Stock Bumper Bolts</u> Remove stock bolts underneath stock bumper as shown in the photo



#### Stock Bumper Removal

Pull and remove stock bumper from frame



#### Stock Reinforcement Bracket Removal

Remove the three upper and one lower bolts holding the stock reinforcement bracket







#### New Reinforcement Bracket Install

Using existing stock bolts and bolts provided, hand tighten the bracket into place but keep loose for rear bumper adjustment.



#### New Reinforcement Bracket Install (Continued)

Use exisiting bolt and 3/8" bolt shown here



#### New Reinforcement Bracket Install (Continued)

Use 1/2" bolt as shown in photo to attach underneath frame reinforcement bracket.







# **Bumper Fitting & Alignment**

Place the bumper onto the frame and check for centering and alignment. Once satisfied, tighten down reinforcement bracket bolts. Enjoy!



