




INSTALLATION GUIDE

COLORADO/CANYON
ROCKER GUARDS 2015-2021



HARDWARE

ITEMS	QTY
ROCKER GUARD	2
TREAD PLATE	2
TREAD PLATE HARDWARE	
1/4" – 20 X 3/4" Button Head Bolt	40
1/4" – 20 Nyloc Nut	40
ROCKER GUARD HARDWARE	
3/8" – 16 X 1-1/4" Hex Cap Bolt	20
3/8" – 16 Clip Nut	20
3/8" USS Washer	20

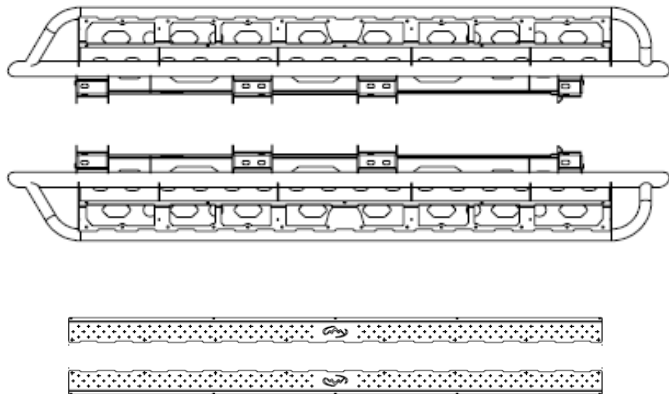

SKILL LEVEL - 2 STARS



- 1 STAR ★☆☆☆☆
- 2 STARS ★★☆☆☆
- 3 STARS ★★★☆☆
- 4 STARS ★★★★☆
- 5 STARS ★★★★★

- EASY - No tools required
- BASIC - Requires standard tools, basic mechanical knowledge and understanding
- MODERATE - Requires standard tools. Some drilling and/or cutting.
- ADVANCED - Requires speciality tools. Drilling, cutting, and/or welding
- EXPERT - Professional installation recommended.

DISCLAIMER

Expedition One is not responsible for any damages to vehicle or injury.
We always recommend professional assistance when installing our vehicle products.

Always follow safety precautions including the use safety gear and devices.

INSTALLATION


1 OEM STEP REMOVAL

If equipped, remove the OEM steps or sliders from the vehicle.

2 TREAD PLATE INSTALLATION

Install the tread plates on the rocker guards using the provided 1/4" hardware.


DRIVERS SIDE SHOWN

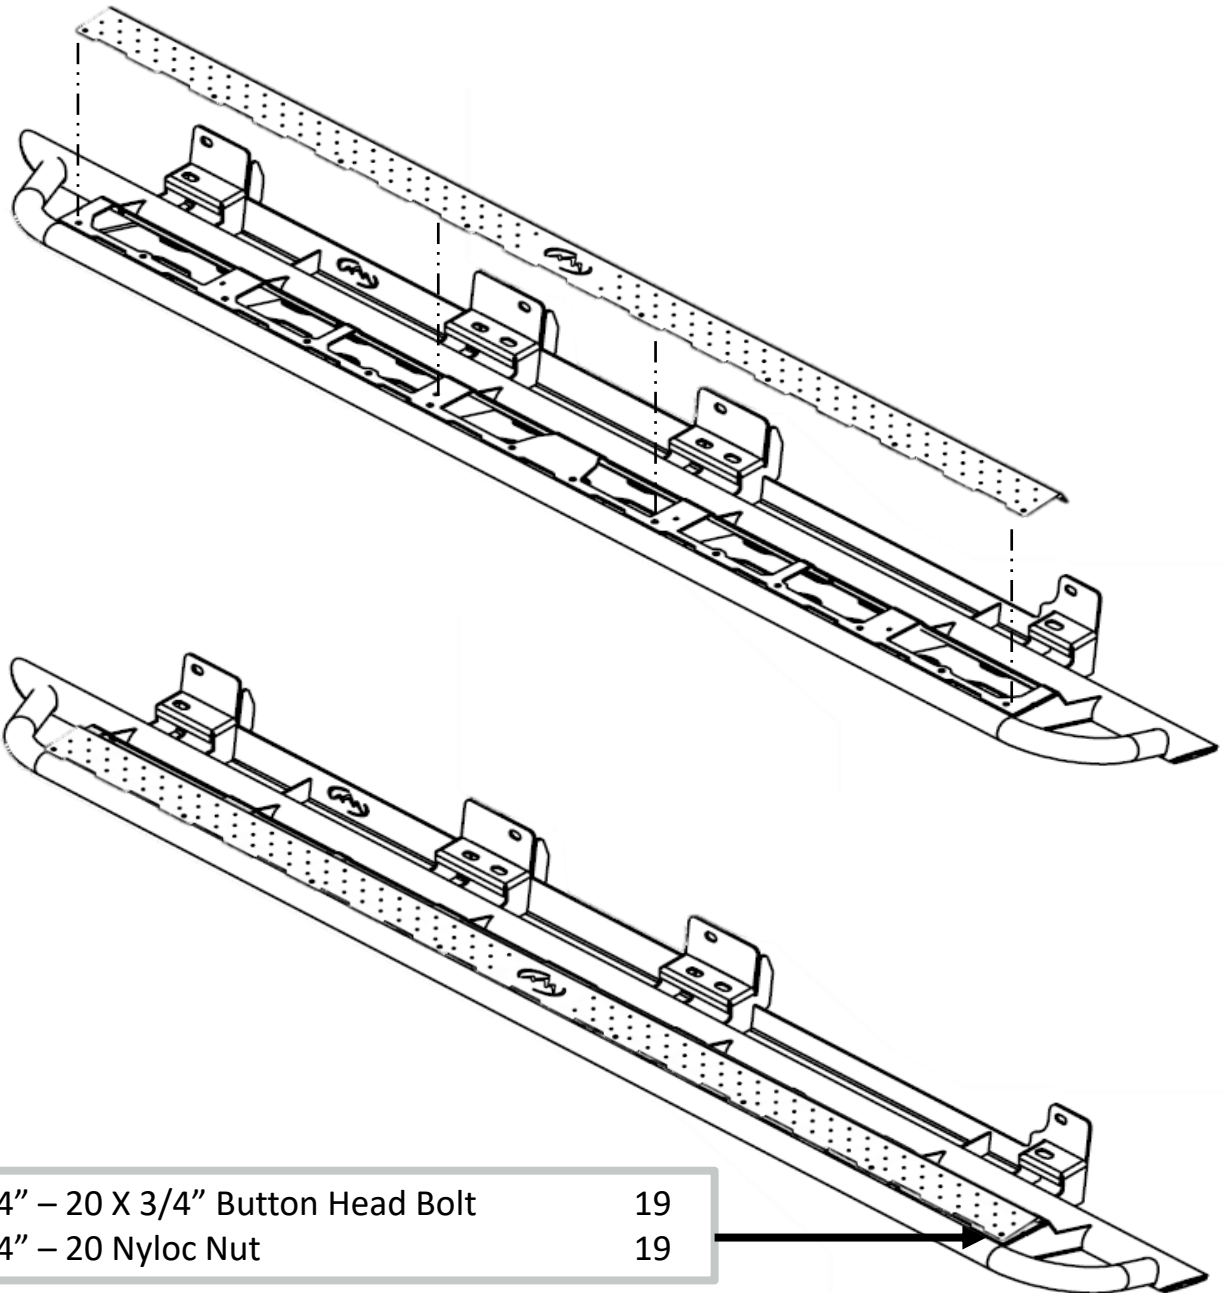

3 ROCKER GUARD MOUNTING


Attach provided clip nuts to underside of the vehicle (hold the rocker guard in place to find the locations). Some mounting locations will require drilling the location to fit the clip nut. (this is not required but strongly recommended). Attach the rocker guard to the under side of the vehicle and mount using the provided 3/8" hardware.

DRIVERS SIDE SHOWN

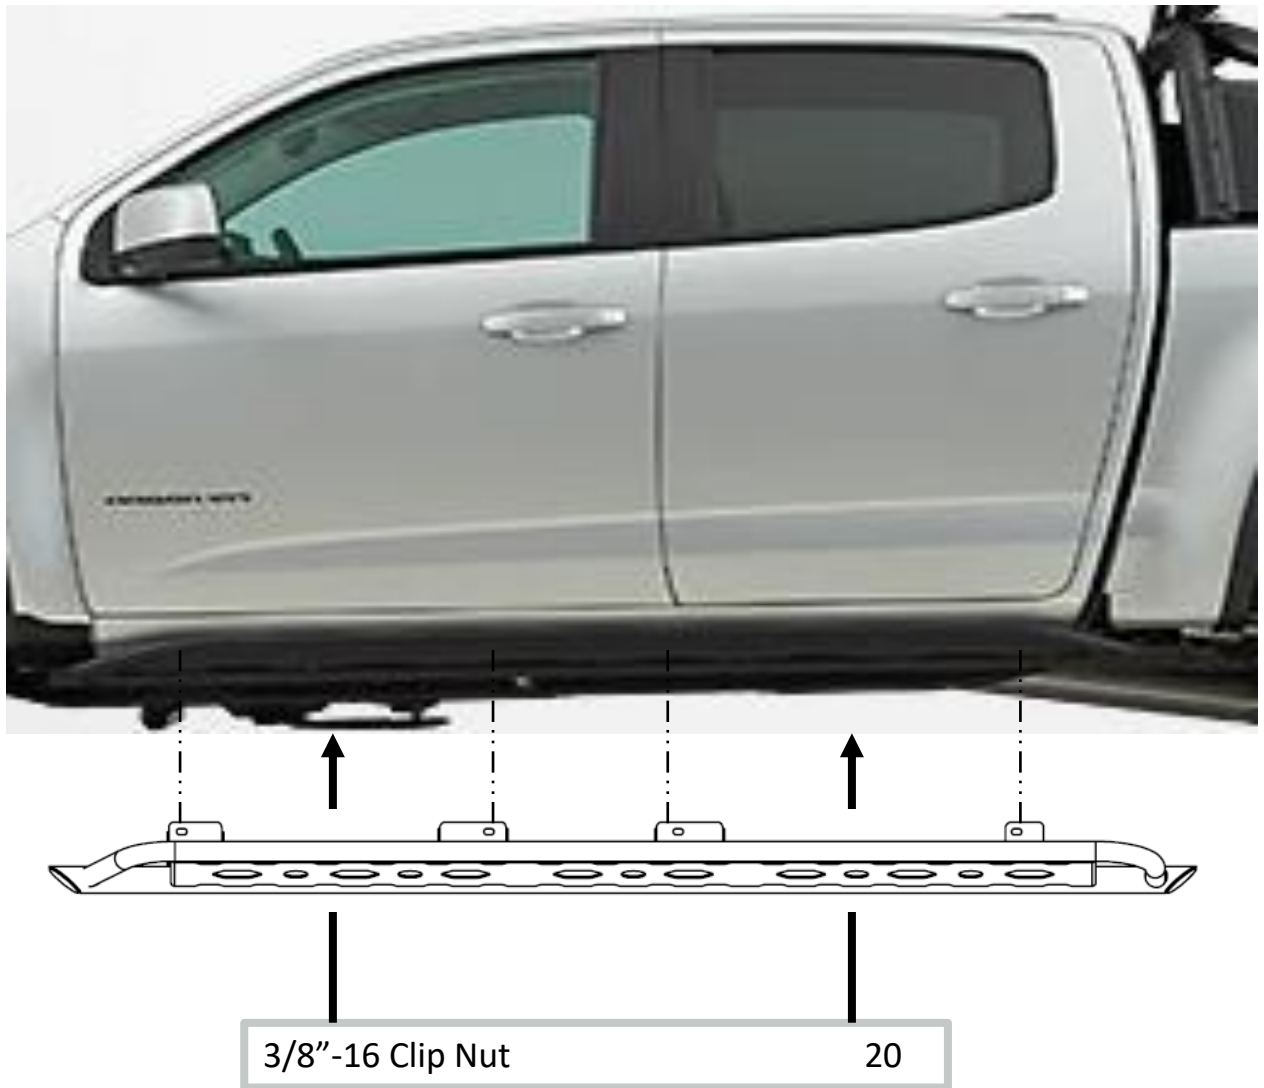

CONTINUED

Mount using the provided 3/8" Hex Caps and Washers.

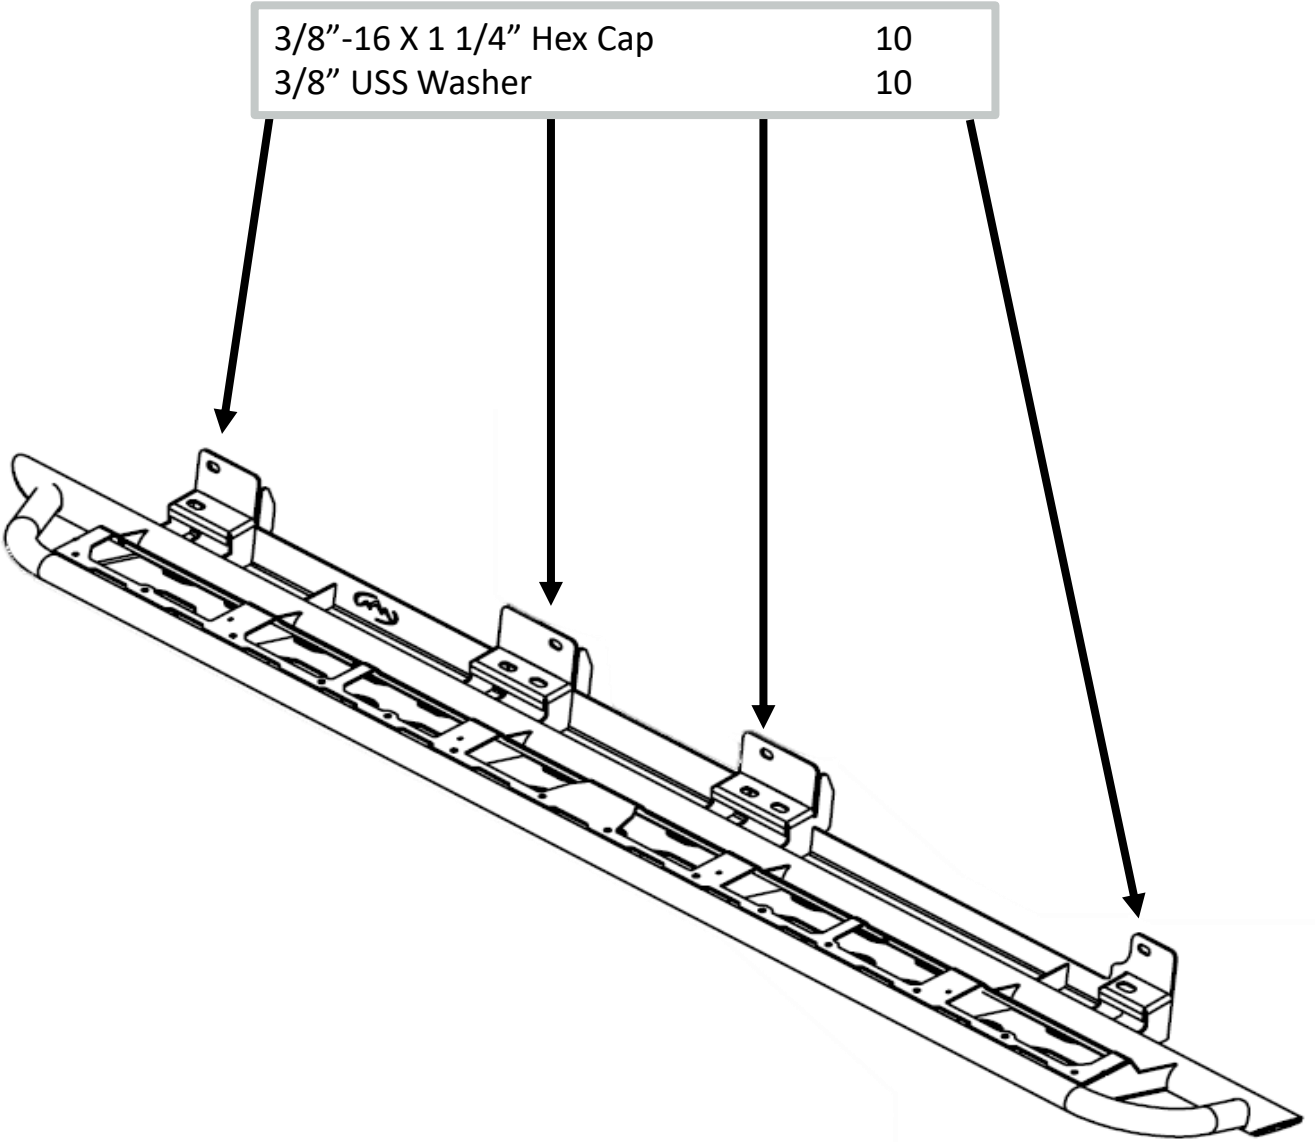

4 HARDWARE

Check that all hardware has been installed. Once complete align and center the rocker guards with the vehicle. Even and equally space all gaps and spaces with the vehicle.

TIGHTEN ALL HARDWARE.

CHECK HARDWARE REGULARLY AND TIGHTEN AS NEEDED, INCLUDING AFTER OFFROAD USE.